 


In receiver cradle is an infrared beam that will disconnect caller if something is placed in front of it.

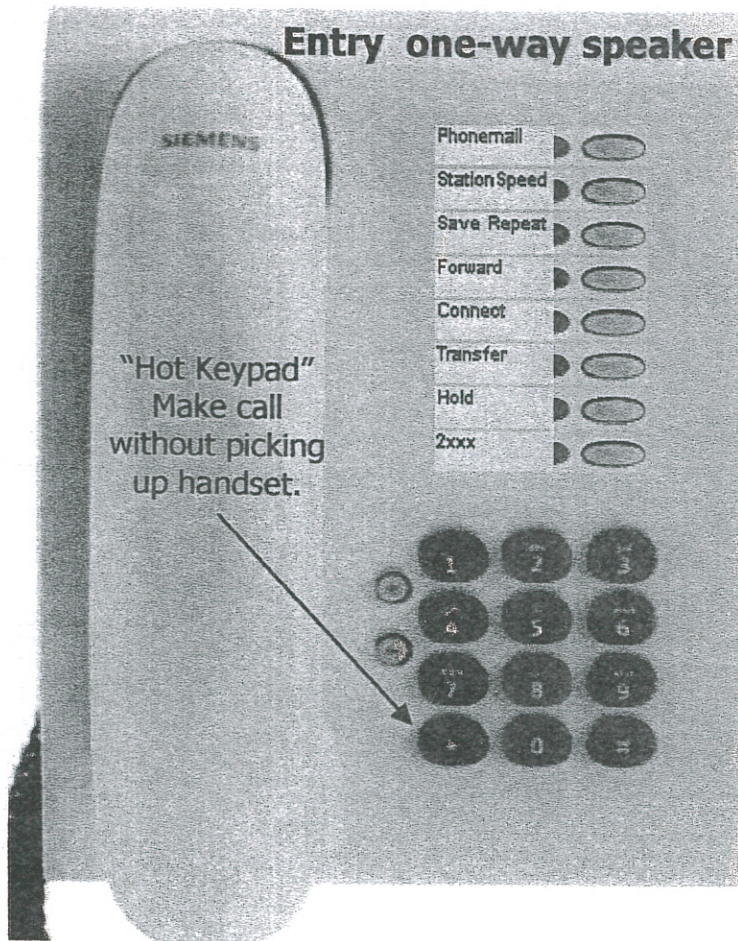

USING YOUR PHONE:

Phonemail: Light will be lit when new messages are received. Follow directions on PhoneMail sheet

Station Speed: Use for up to 30 Personal Speed dials using the codes 00-29. **To Program:** Press # # 3, key in code 00-29, key in phone number to store. Hang up.

To Call: Press Sta Speed, then code.
(Code: To call= #3, then code)

Save Repeat: Save a number to redial anytime later. Press button while connected to a party. Number is saved. Press button again at anytime to redial that number.

Forward: Dial tone, Press Forward key, then number to forward calls to, then #. Hang up.

To Cancel Forwarding: No dial tone, press Forward key.
(Codes: Forward= #9, then number, then #. Cancel= ##9)

Connect: Press button to connect back to caller during transfer or conference call.

Transfer: With caller on line, press TRANSFER, key in number to transfer call to, wait for answer, hang up. Or Press Transfer again to connect all 3 parties.

Hold: Press HOLD to place caller on Hold, press light lit next to extension line to reconnect.

Ext Line: Your Direct Dial line that can be reached from outside with 632-.